

INSTRUCTION

SHOWER ENCLOSURE - XL191S/XL191S+XL195S

We appreciate your choosing of our shower products, and wish you a pleasant experience with our products and service. Please read Instruction carefully before installation.

IMPORTANT

Please check the shower enclosure for transport damage and completeness before installation. Complaints made following installation cannot be accepted.






Please read carefully the following instructions before installing your shower enclosure to ensure safe and proper use and avoid any injury to either the installer or user .Failure to comply may invalidate your guarantee.

CARE INSTRUCTIONS





Shower enclosures should be cleaned after every use.To prevent limescale from building up, use a squeegee,a soft cloth or chamois leather-but no cleaning-to wipe off any water droplets left after showering.Residue left by bodycare products (liquid soap,shampoo, shower gel) can also cause substances to accumulate.Use water to rinse away residues after use.All sliding door track fittings should also be cleaned this way-to ensure that they continue run smoothly.

- **Don't allow limescale to build up-especially in hard water areas**
- **If you do get a stubborn limescale build up,a mixture of 50:50 vinegar and water will help you to clean it away-but make sure all vinegar is rinsed off completely**
- **Never use strong detergents or cleaning agents**
- **Cleaning materials should wherever possible be rated between PH4 and PH8**
- **In no circumstances should you use any abrasive substance**



Tools Required(not supplied)


Magnetic Crosshead Screwdriver		Silicone Sealant	
Rubber Mallet		Knife	
Spirit Level		Pencil	
Tape Measure		6mm Drill Bit (suitable for wall type)	Ø6 
Power Drill (with hammer action)		Hacksaw	

Shower screen fittings

Ref	Illustration	Description	Qty
S01		Guiding element	1pair
S02		Upper pulley	2
S03		Wall fixing set	1
S04		Handle	1
S05		Bottom connector	1pair
S06			1pair
S07			1
S08		Plugging pellets	1
S09		Screws ST4x30	6
S10		Wall profile	8
S11		Open end wrench	1
S12		3mm allen key	1
S13		Density board	1
S14			1pair
S15			2
S16		Single side rubber strip	1


Shower screen fittings

Ref	Illustration	Description	Qty
S17		Fixed glass	1
S18		Door side tape	1pair
S19		Door	1
S20		Upper rail aluminum	1pair
S21		Bottom waterproof tape	1
S22		Bottom retaining aluminum	1
S23			1
S24		2.5mm allen key	1
S25		Screws M3x50	2
S26		Screws ST4x30	2

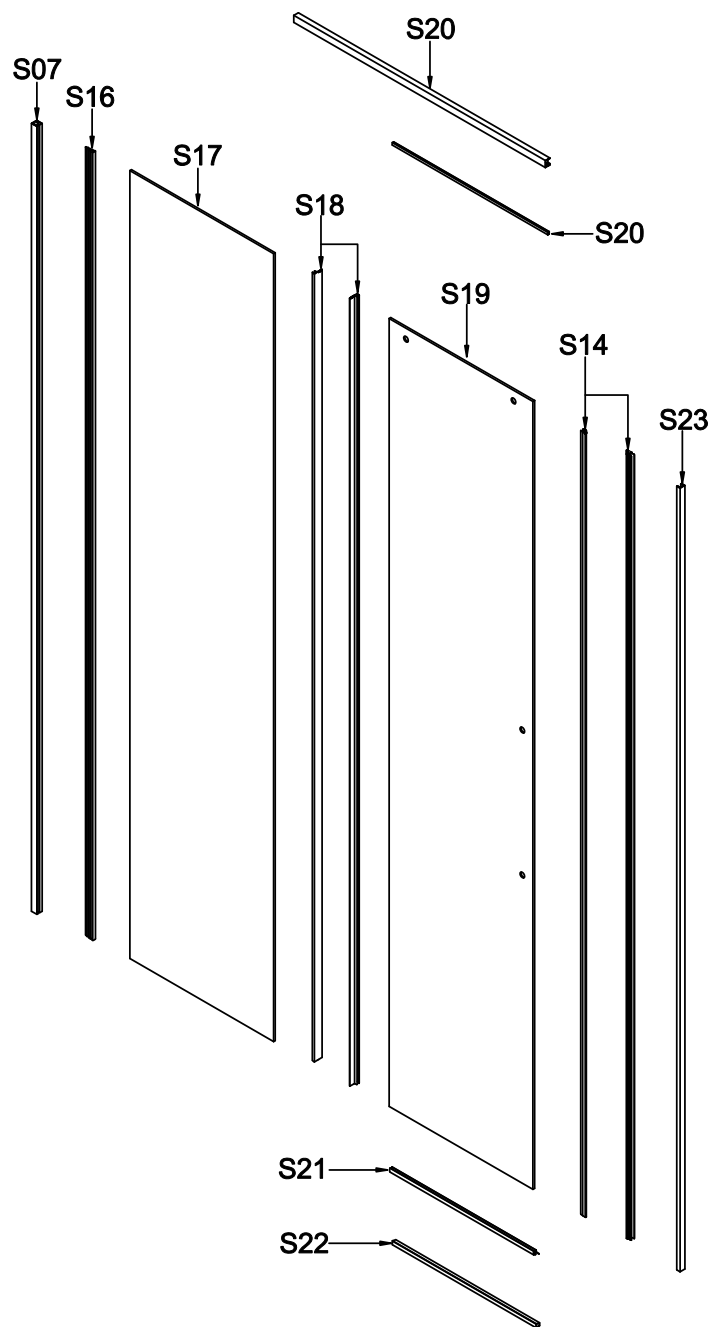


1







Parts list
(Include):

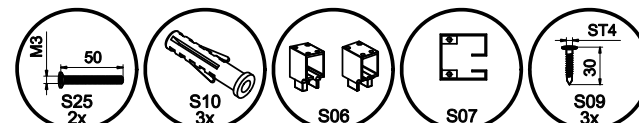

Tools required
for product
installation:

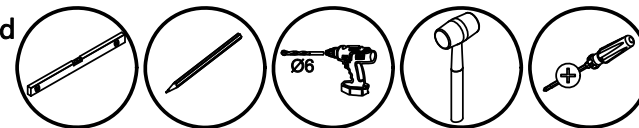


Spirit level


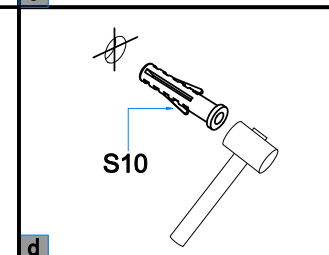
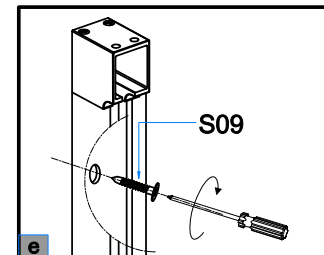
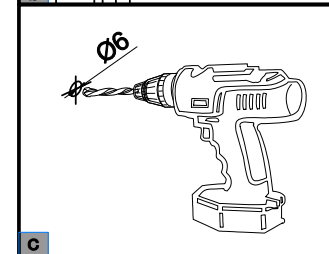
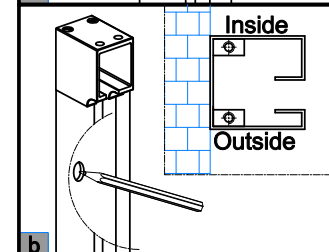
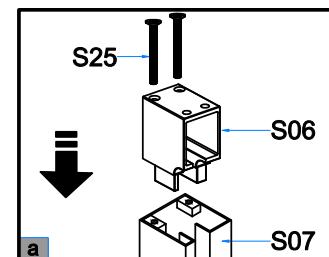
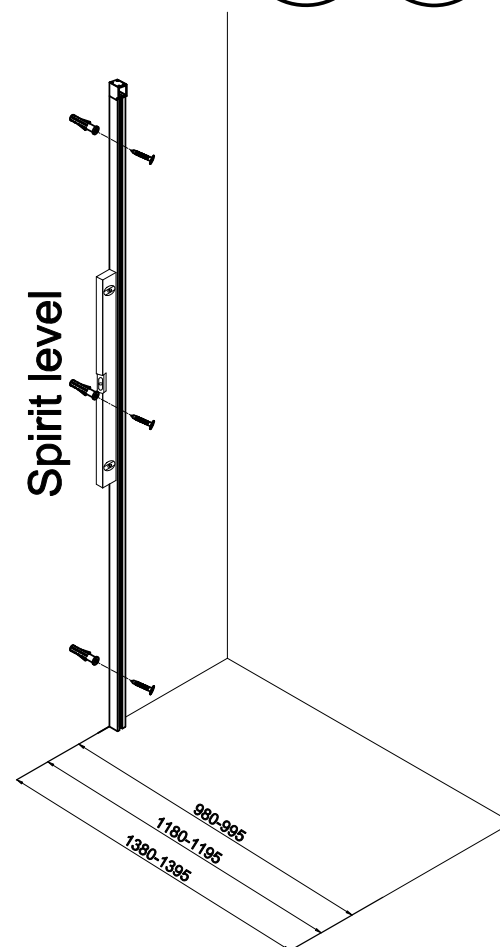


2

Parts list
(Include):

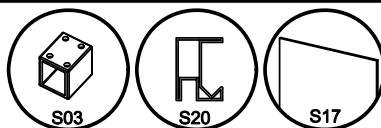


Tools required
for product
installation:

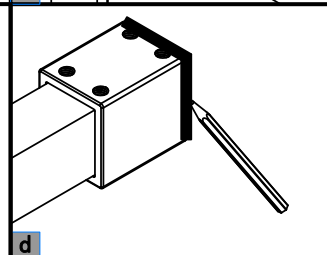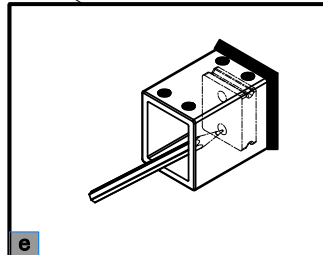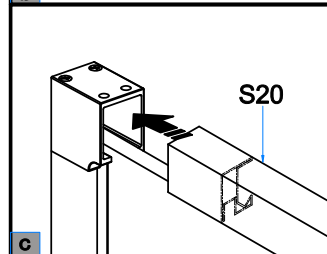
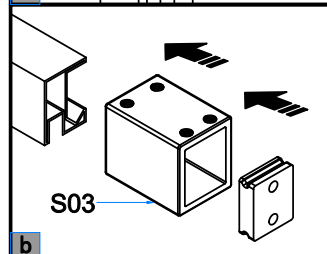
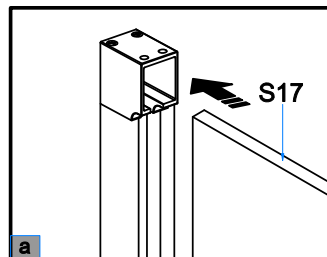
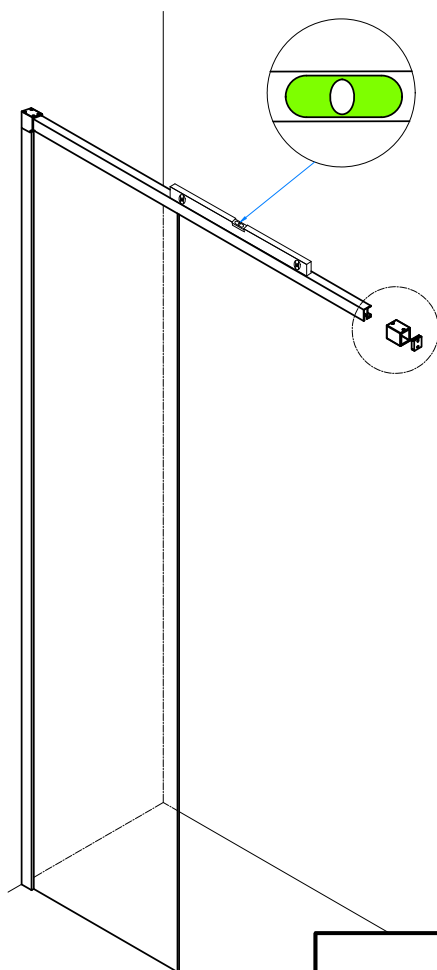
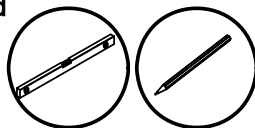


3

Parts list
(Include):

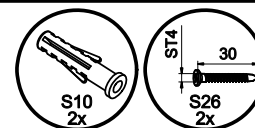


Tools required
for product
installation:

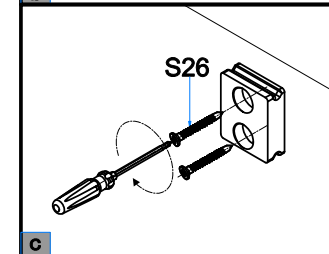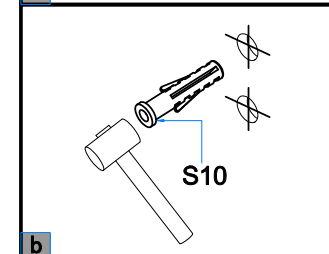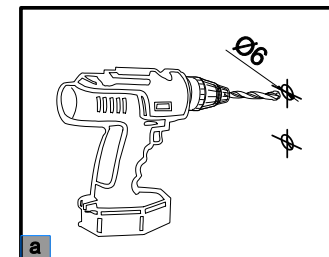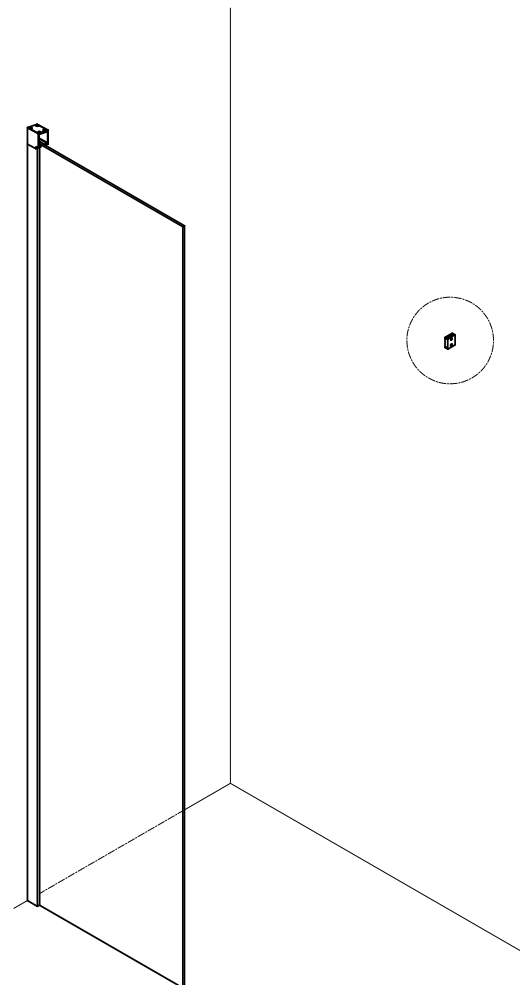
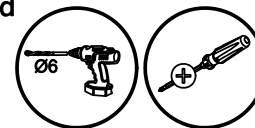


4

Parts list
(Include):

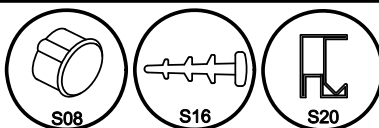


Tools required
for product
installation:

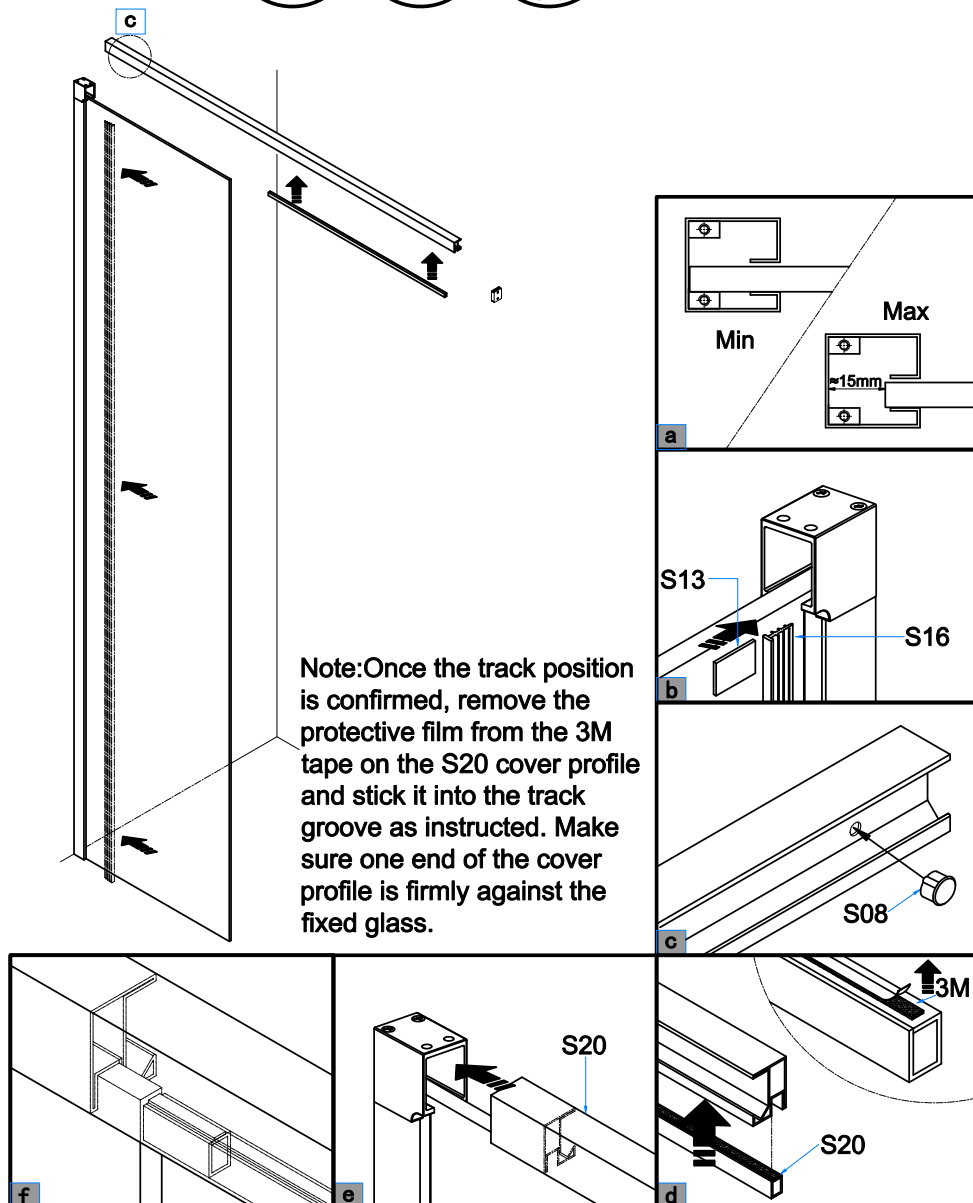
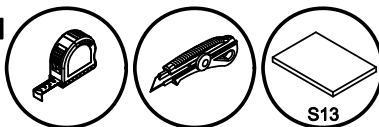


5


Parts list
(Include):

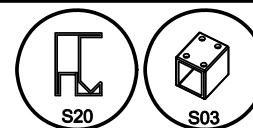

Tools required
for product
installation:

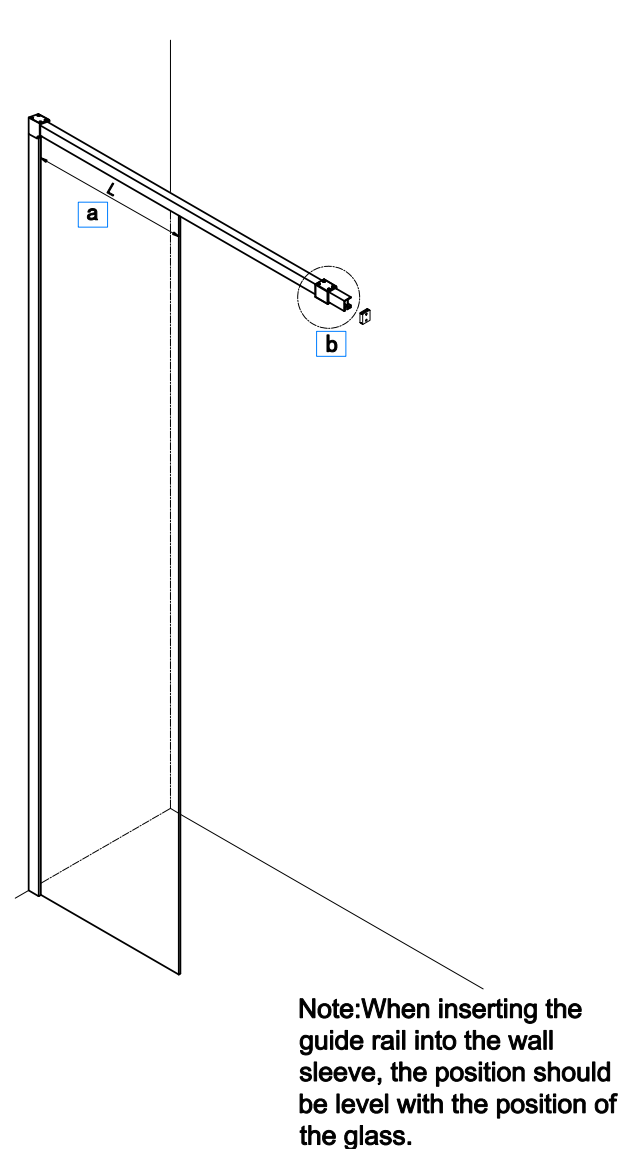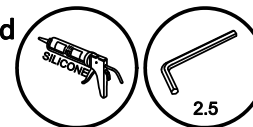

Note: Put the fixed glass onto the profile within 15 mins after silicone, in case the silicone dry



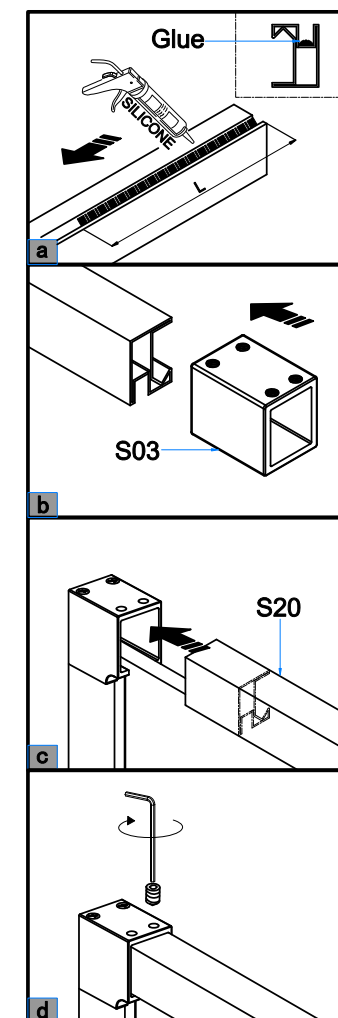


6

Parts list
(Include):





Tools required
for product
installation:

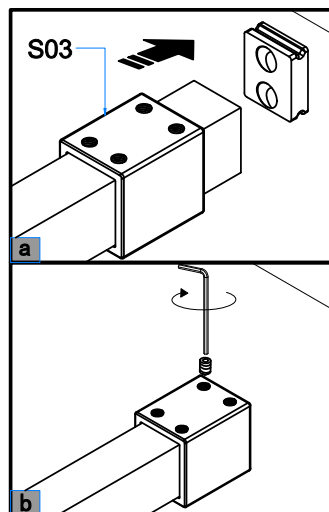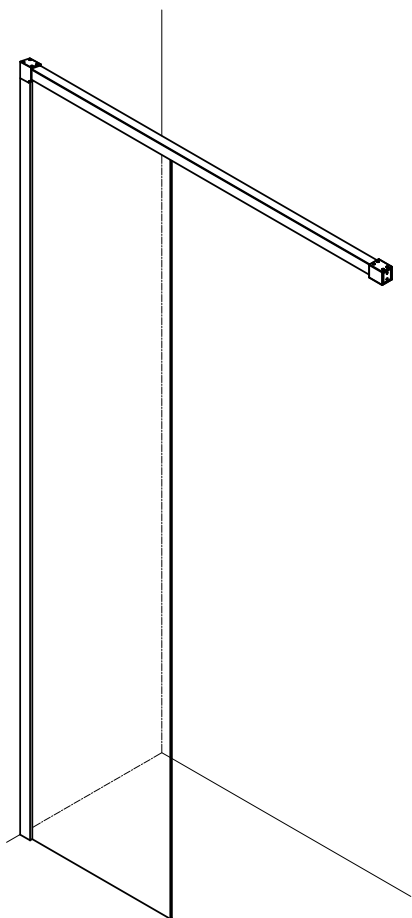
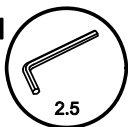


7

Parts list
(Include):

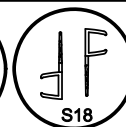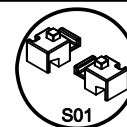


Tools required
for product
installation:


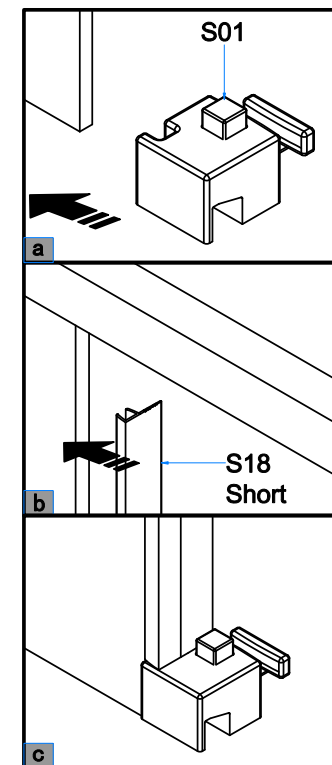
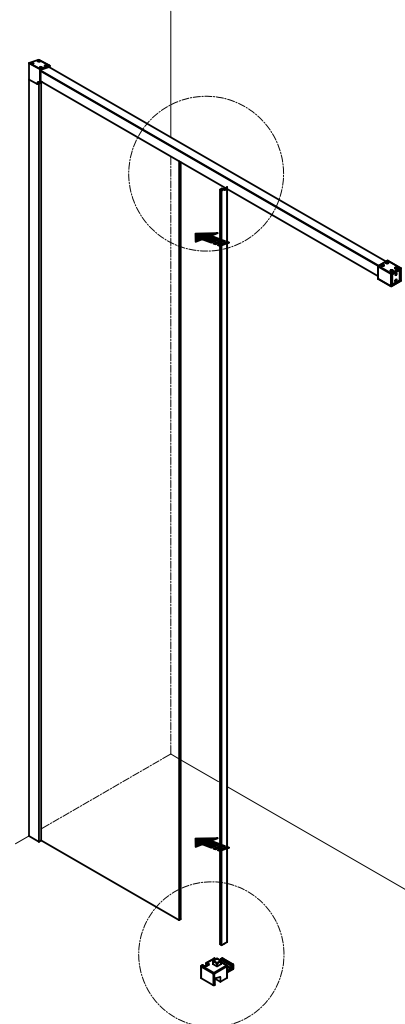


8

Parts list
(Include):

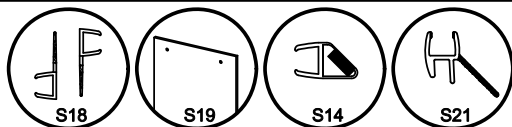

Tools required
for product
installation:

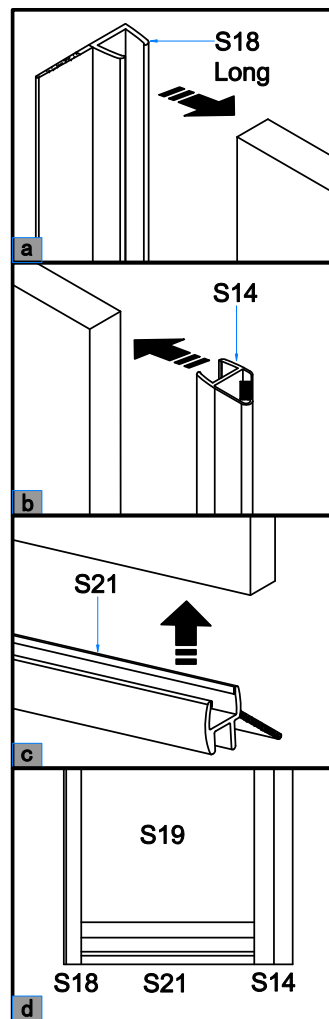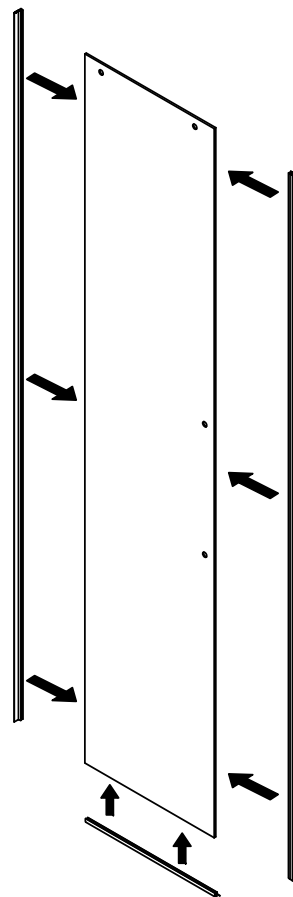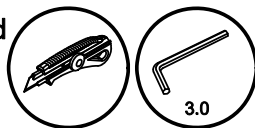




13

9

Parts list
(Include):




Tools required
for product
installation:

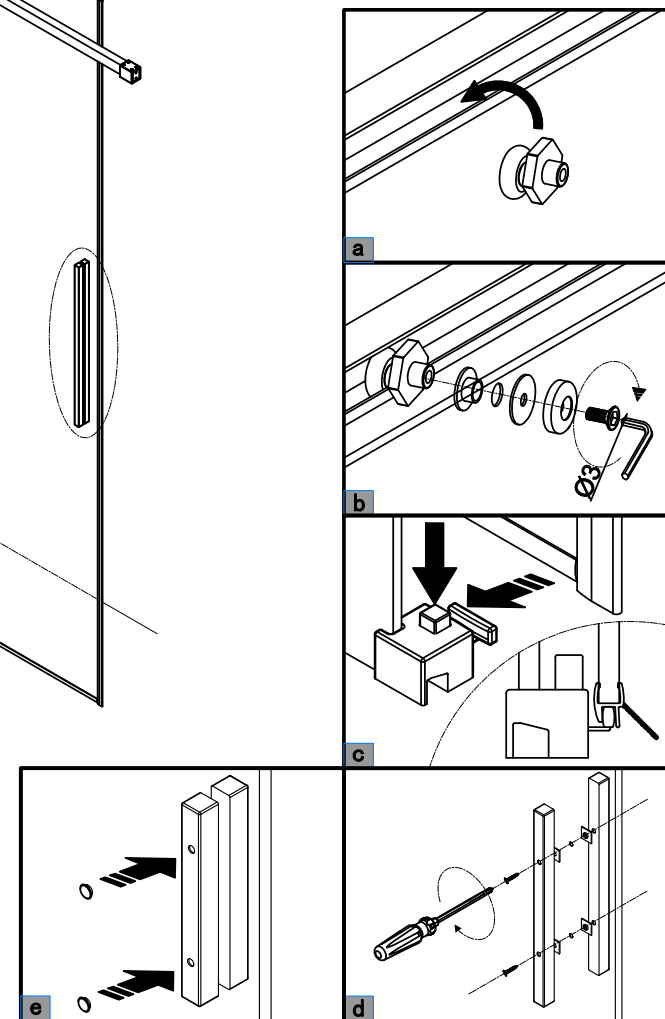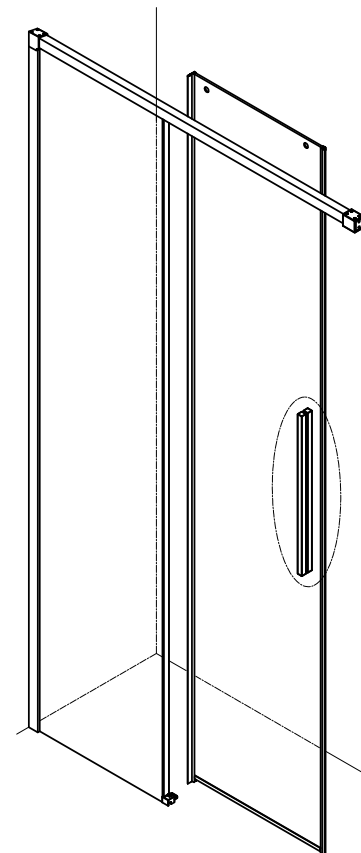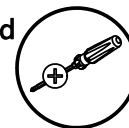









14

10

Parts list
(Include):








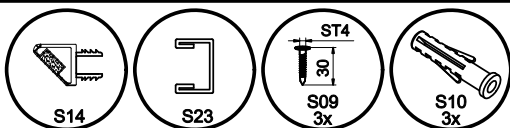


Tools required
for product
installation:

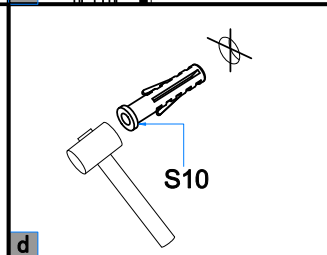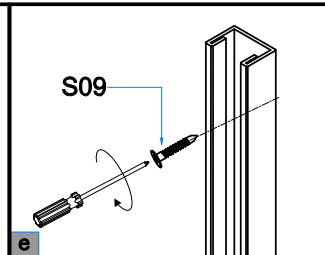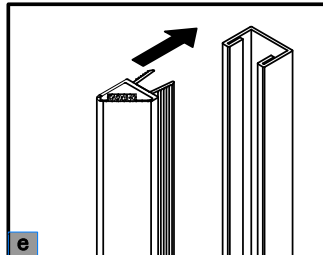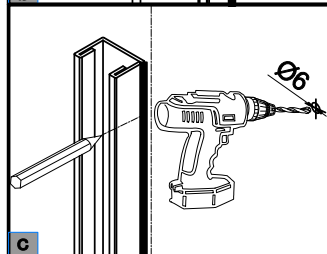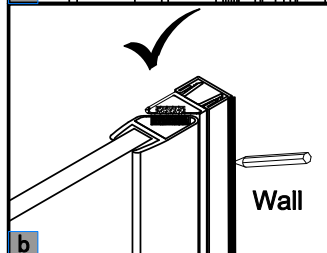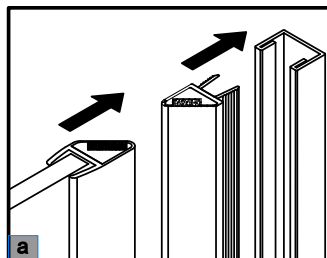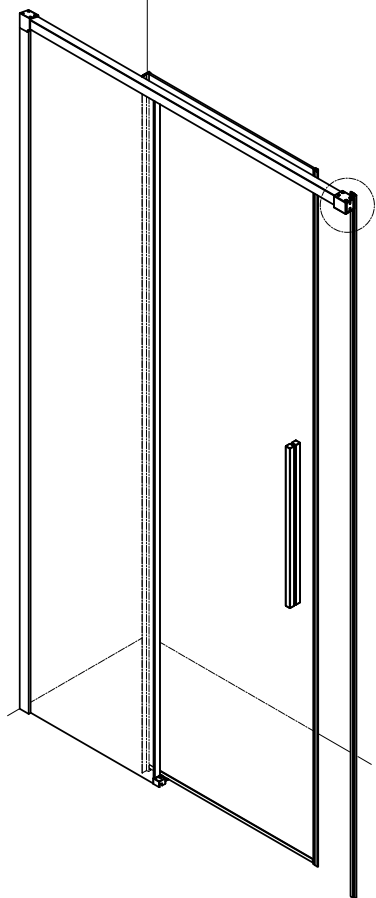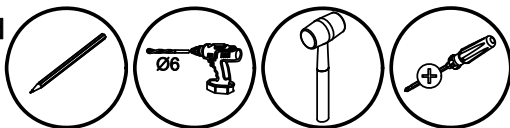


11









Tools required
for product
installation:

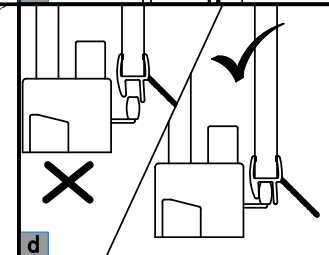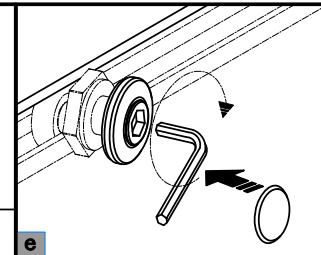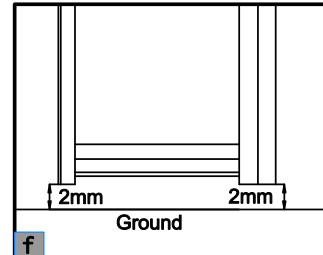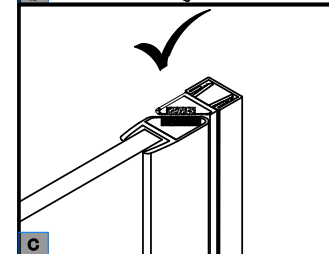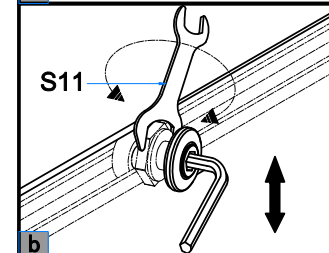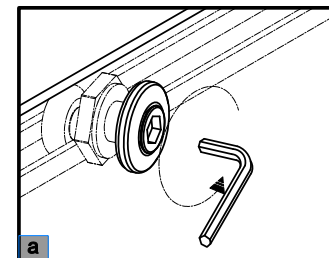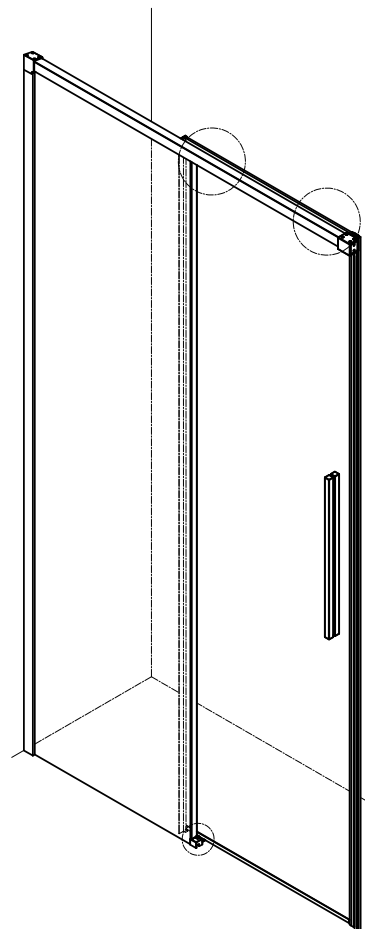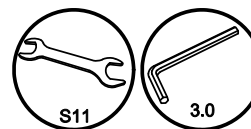

12 Onderdelenlijst (Meegeleverd):

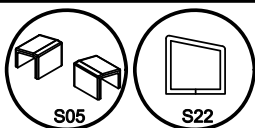


Vereist
gereedschap voor
productinstallatie:

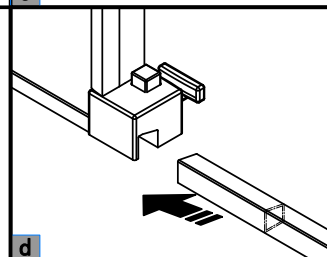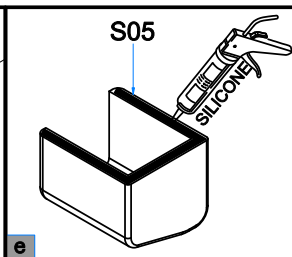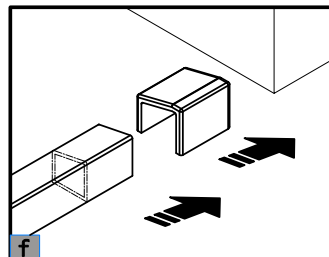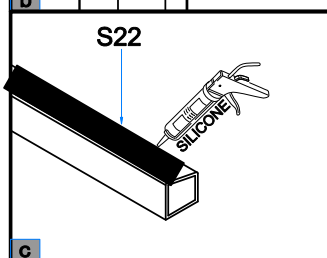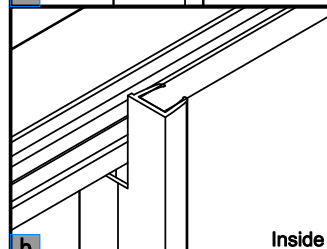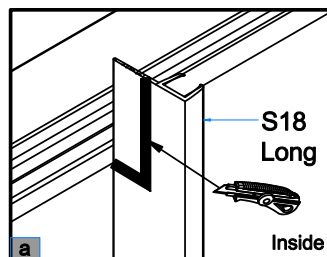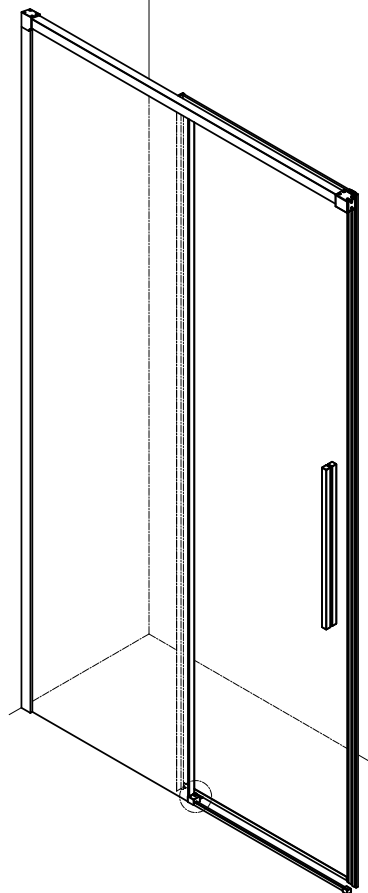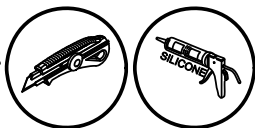


13


Parts list
(Include):

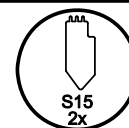






Tools required
for product
installation:

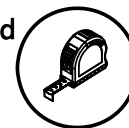

Note: Open the door until the
handle is 40mm away from the
fixed door vertical seal, install
the stopper to the rail profile


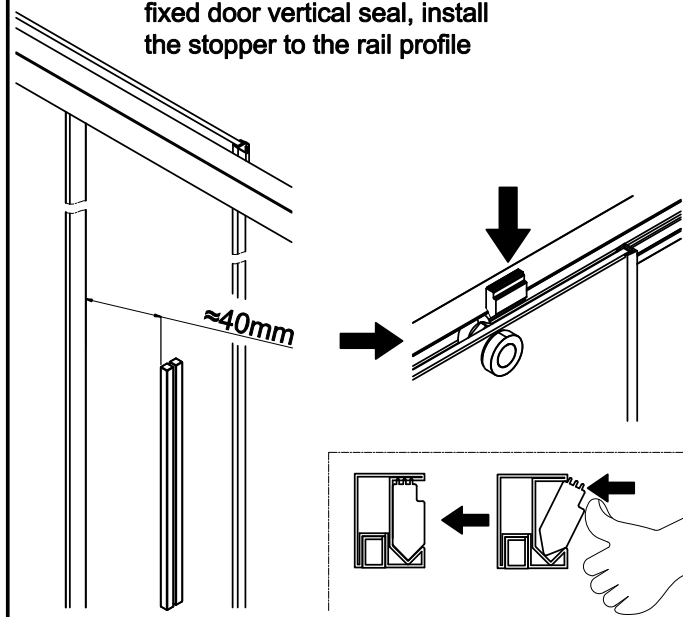


Note: Install the stopper to the
rail profile when the door can be
closed vertically.

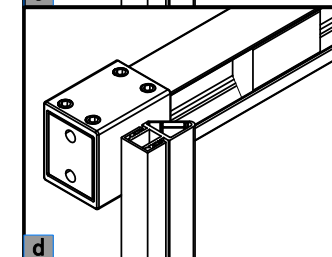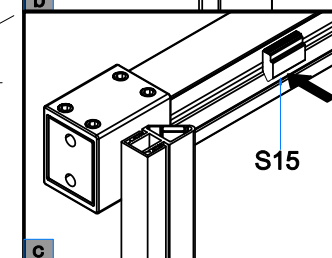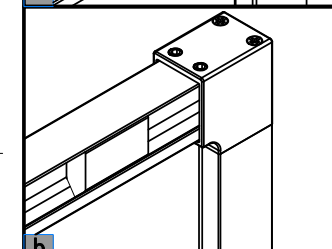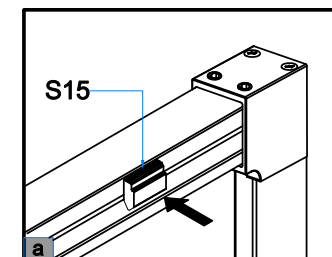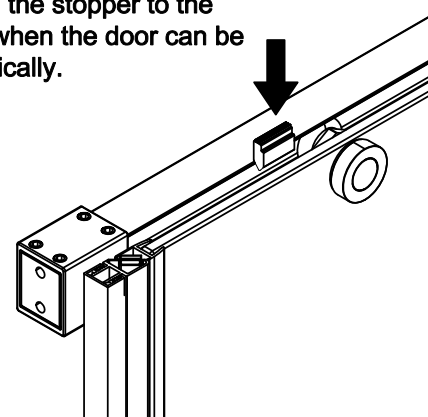

14



Tools required
for product
installation:

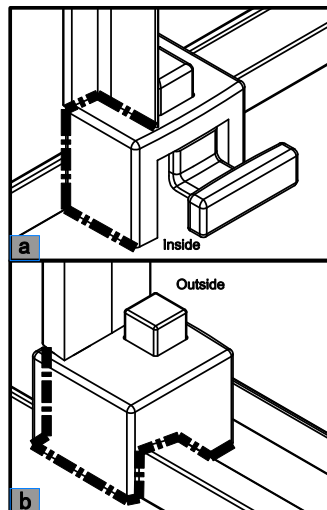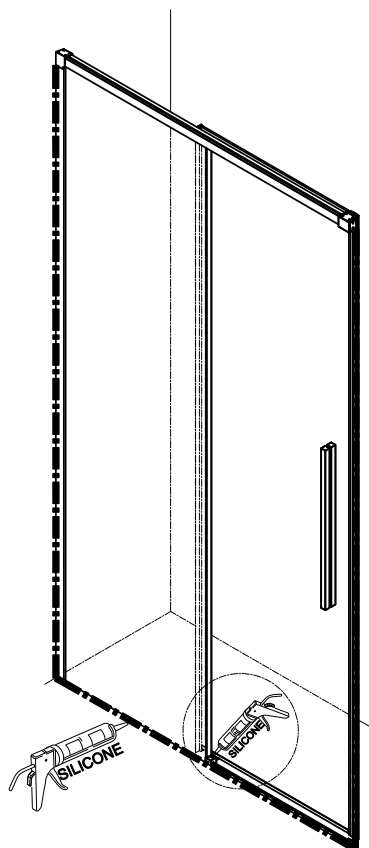



15

Notes for cleaning:


1. Push the button on the bottom guide, and lift up the glass and take out from the bottom guide.
2. After cleaning, push the bottom guide button, lift up the glass and put the glass back on the bottom guide.

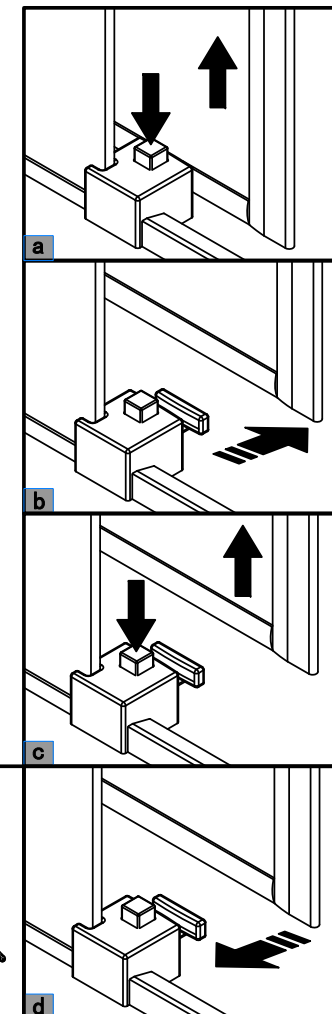
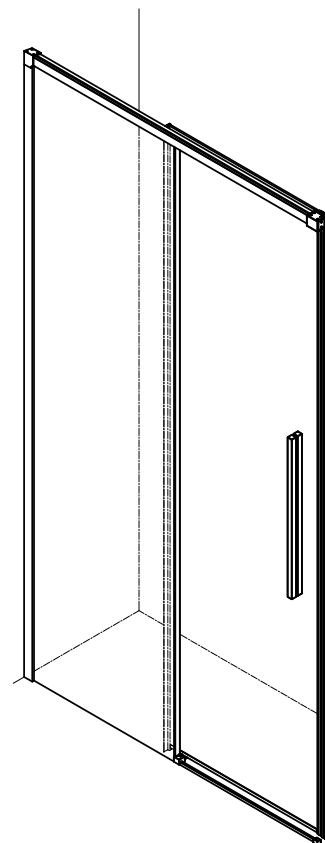


Shower screen fittings

Ref	Illustration	Description	Qty
S01		Guiding element	1pair
S02		Upper pulley	2
S04		Handle	1
S06			1pair
S07			2
S08		Plugging pellets	2
S09		Screws ST4x30	6
S10		Wall profile	6
S11		Open end wrench	1
S12		3mm allen key	1
S13		Density board	1
S14			1pair
S15			2
S16		Single side rubber strip	2
S17		Fixed glass	1
S18		Door side tape	1pair


Shower screen fittings

Ref	Illustration	Description	Qty
S19		Door	1
S20		Upper rail aluminum (Long)	1pair
S21		Bottom waterproof tape	1
S22		Bottom retaining aluminum	1
S24		2.5mm allen key	1
S25		Screws M3x50	4
S26		Plastic elbow	1
S27		Bottom damper	1
S28		Decorative cap	2
S29		Screws M4x8	2
S30		Side glass	1
S31		Upper rail aluminum (Short)	1






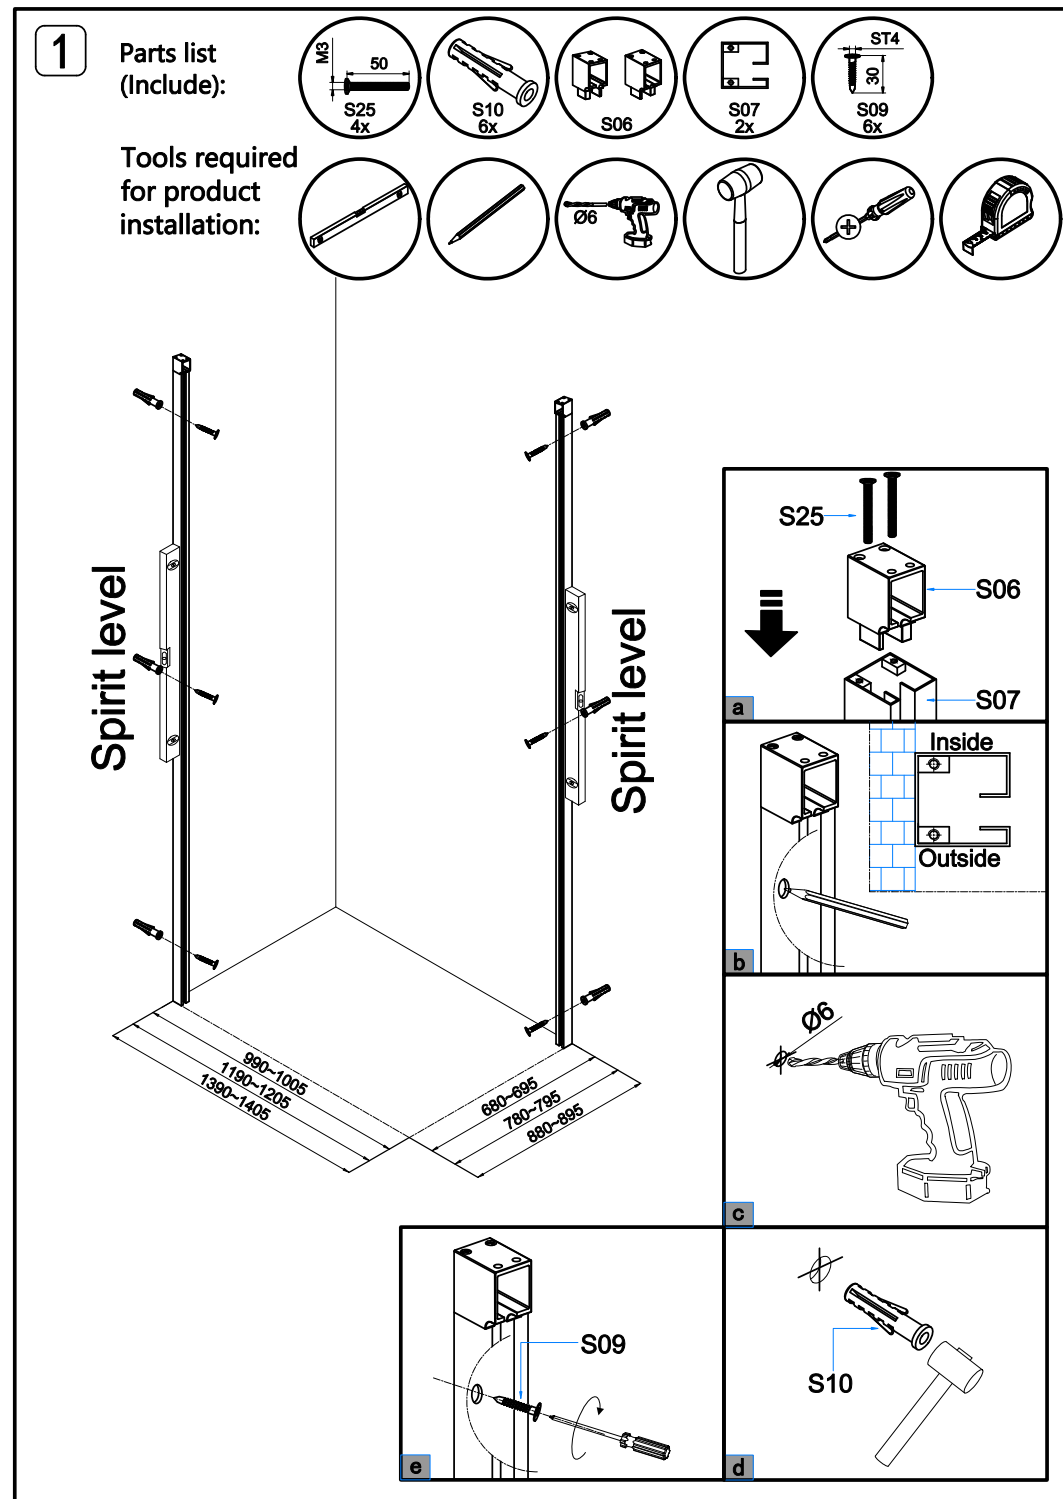
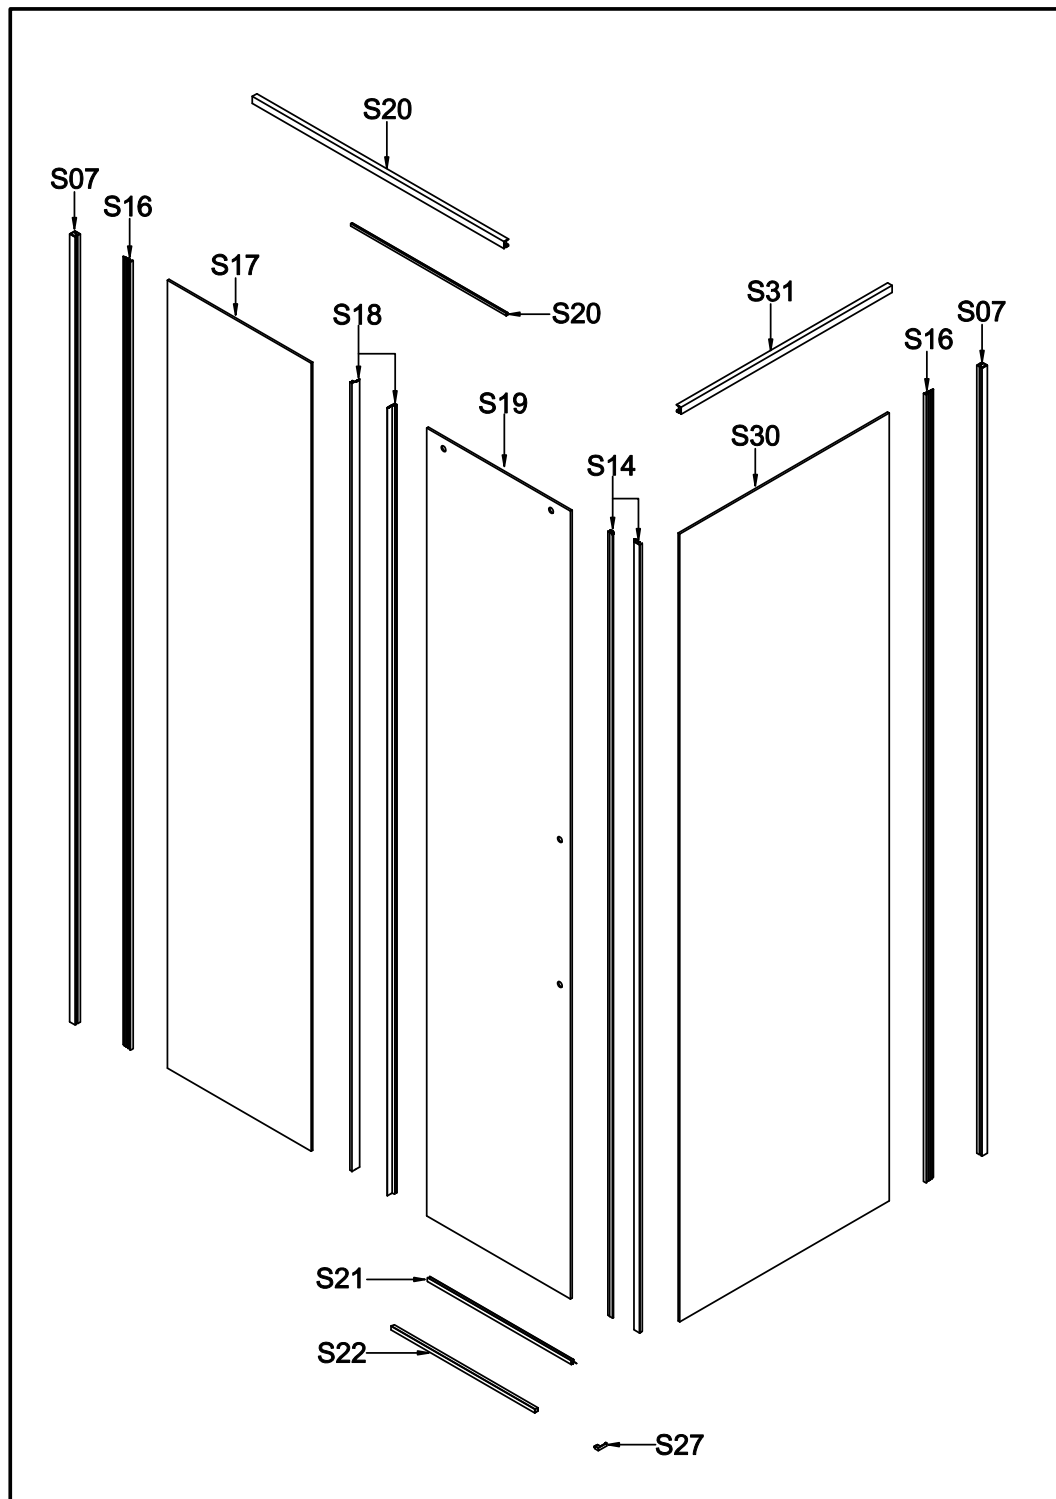


2

Parts list
(Include):

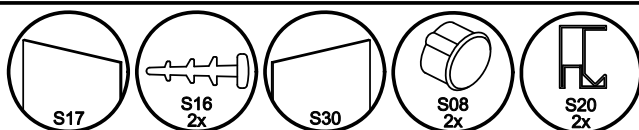


Tools required
for product
installation:

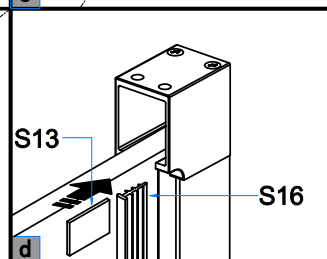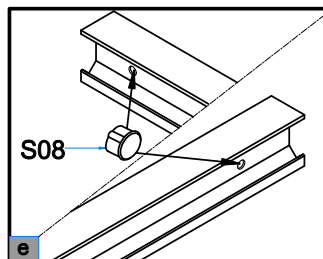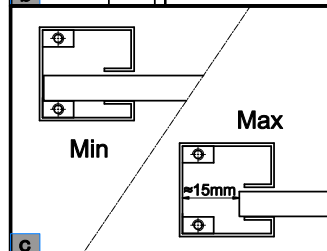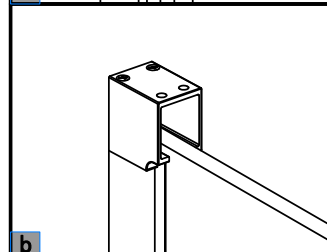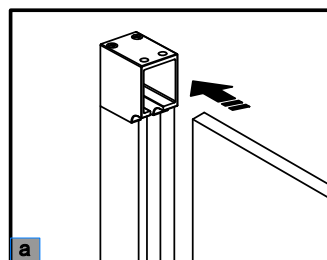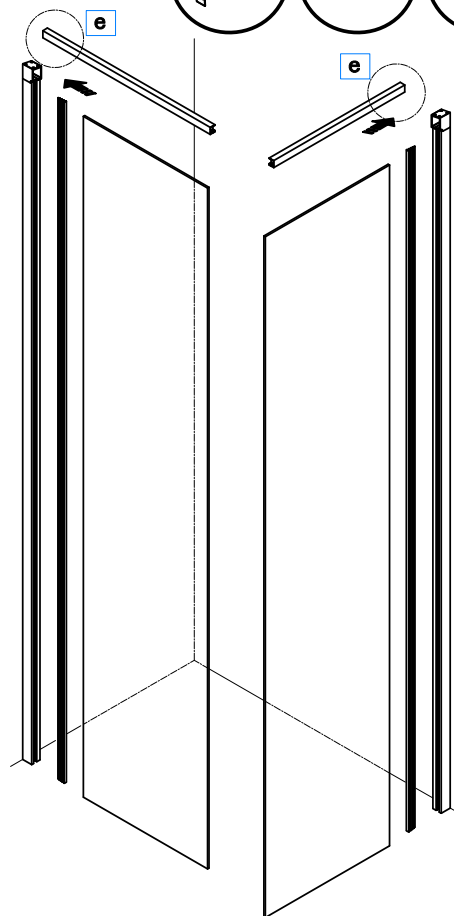
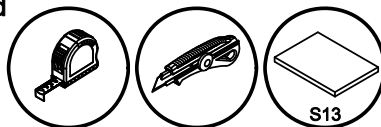


3






Parts list
(Include):

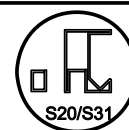

Tools required
for product
installation:

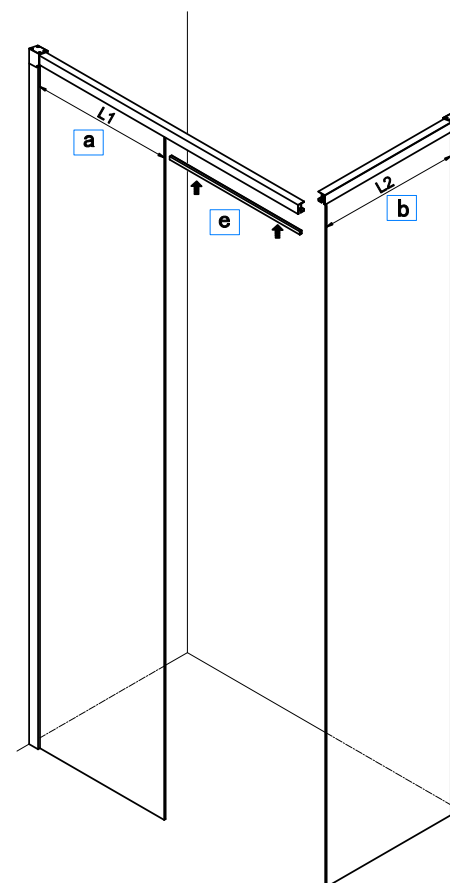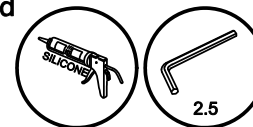


Note: Put the fixed glass onto
the profile within 15 mins
after silicone, in case the
silicone dry

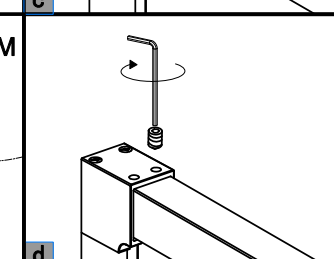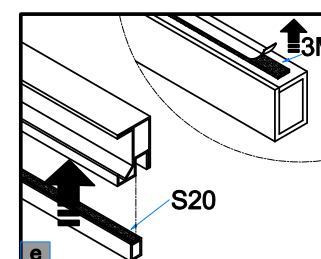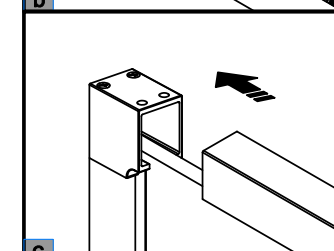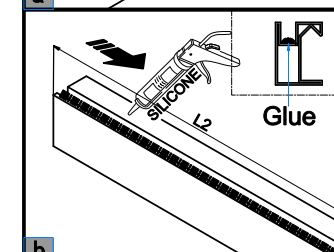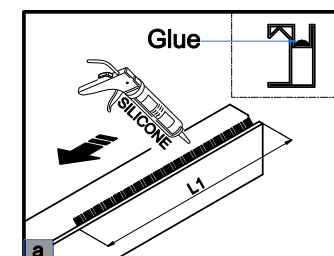



Note: When inserting the
guide rail into the wall
sleeve, the position should
be level with the position
of the glass.

4

Parts list
(Include):

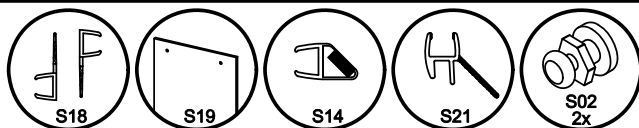

Tools required
for product
installation:

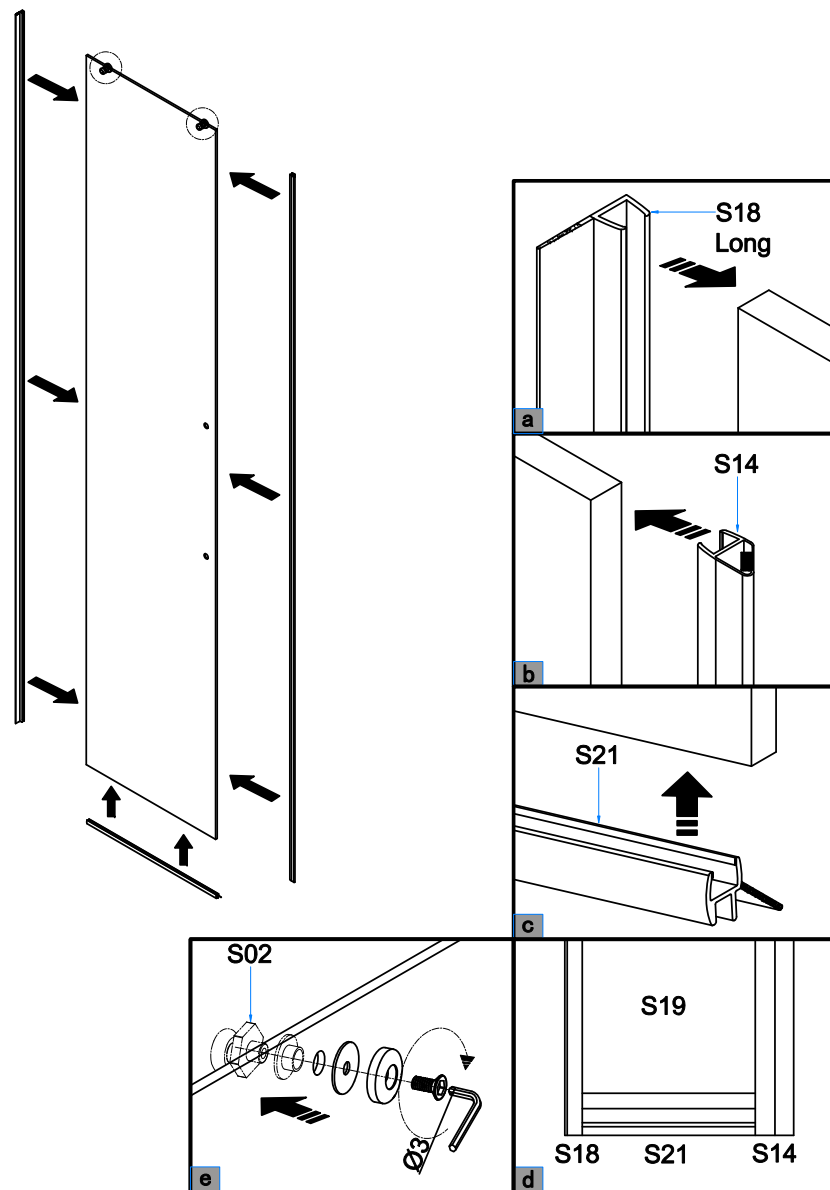
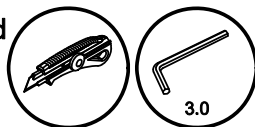


5

Parts list
(Include):




Tools required
for product
installation:

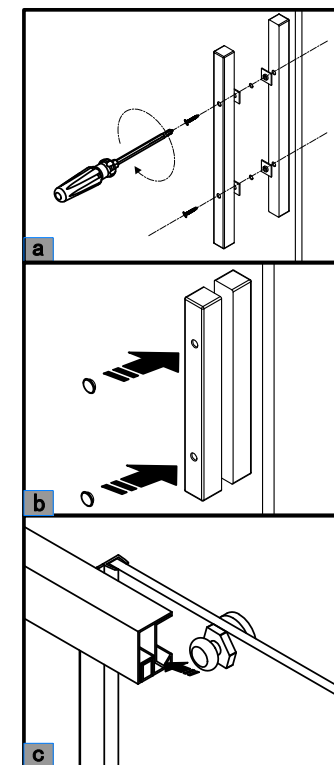
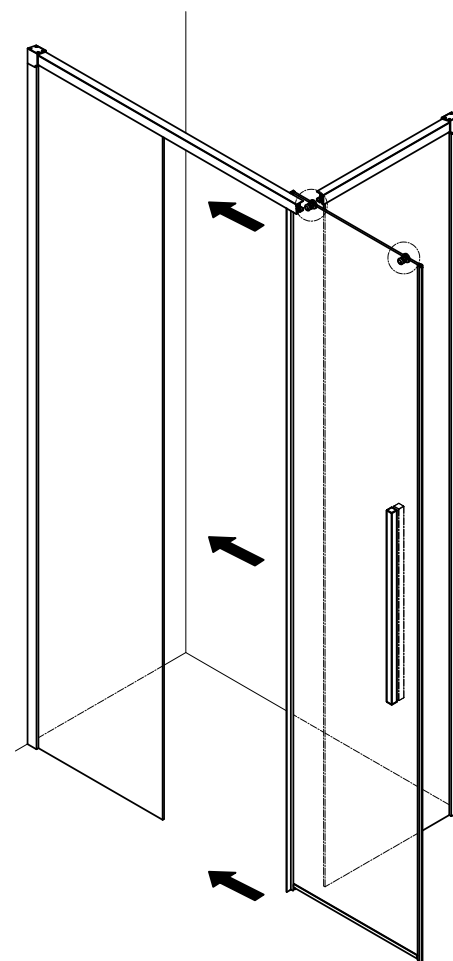


6

Parts list
(Include):

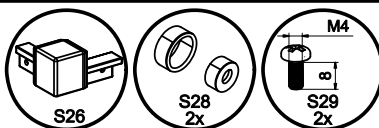


Tools required
for product
installation:

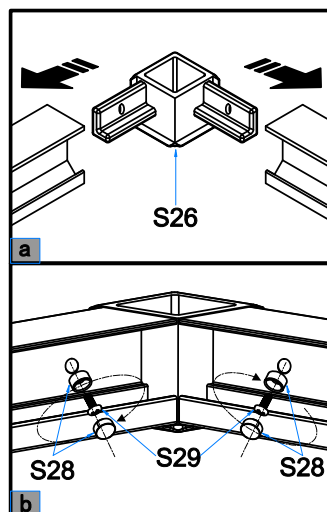
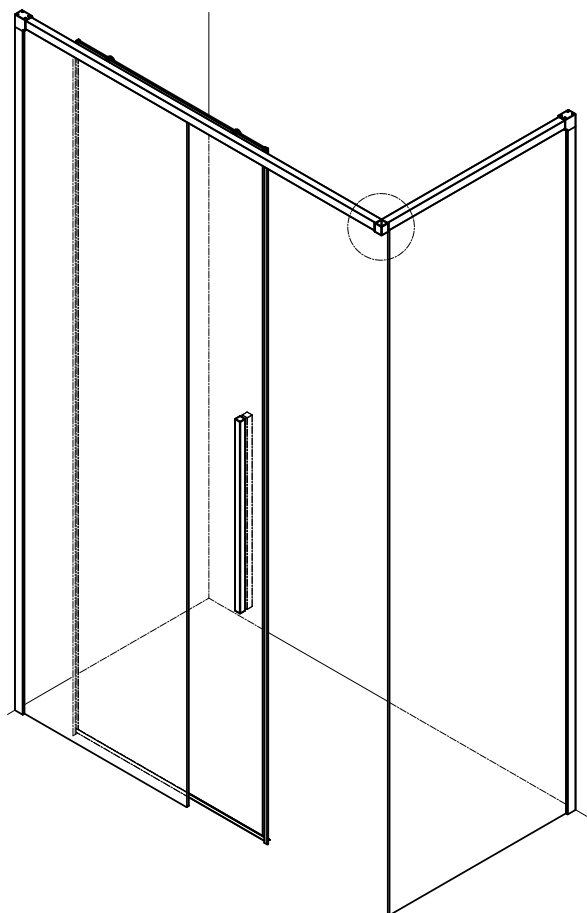


7

Parts list
(Include):

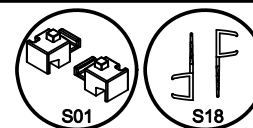

Tools required
for product
installation:

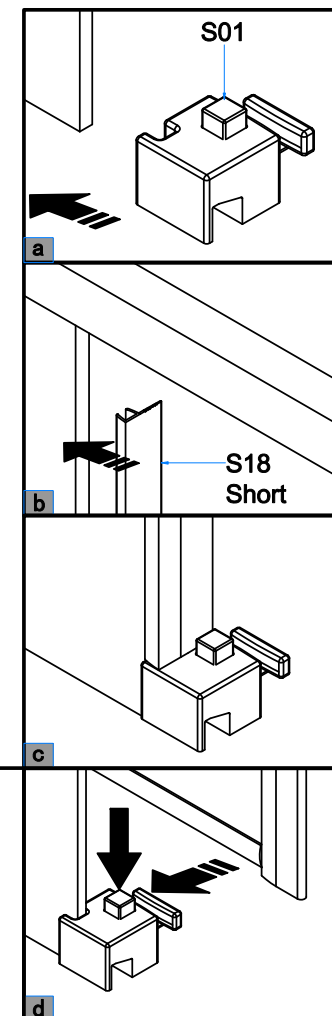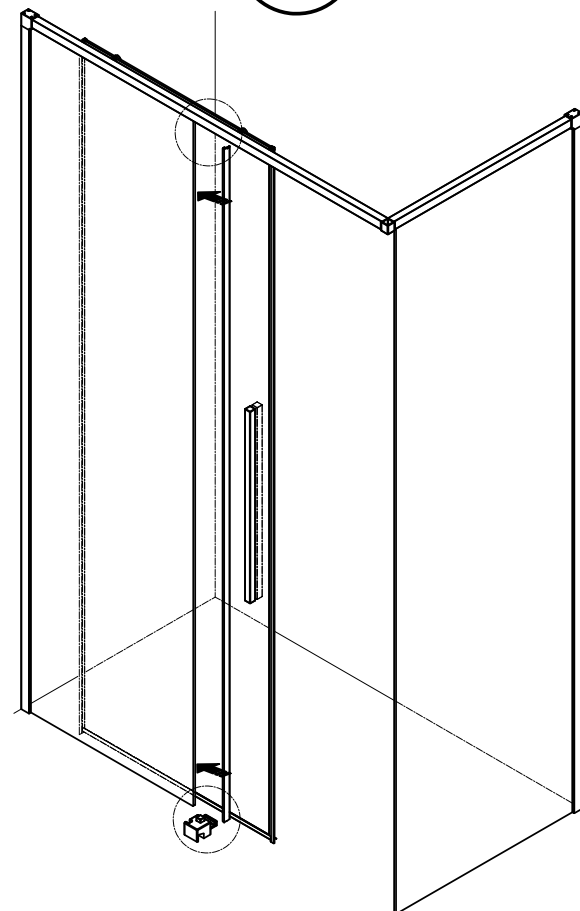



8

Parts list
(Include):




S14

Tools required
for product
installation:

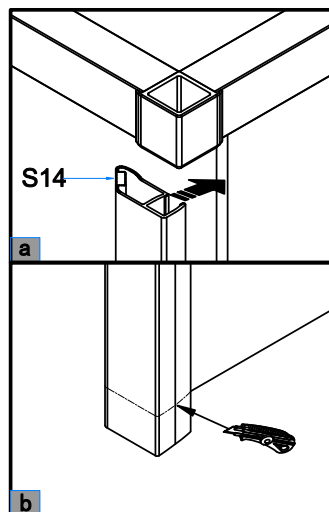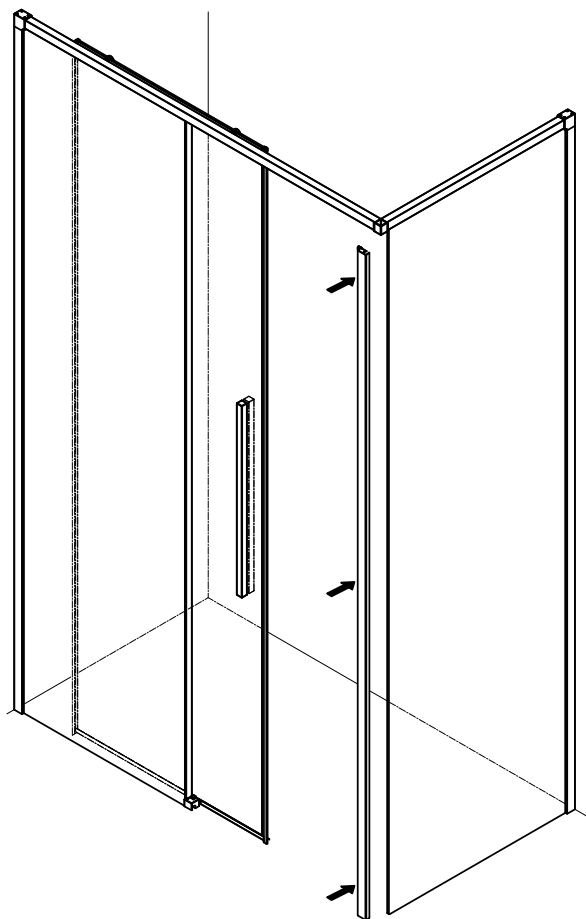


9




Tools required
for product
installation:

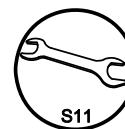

S11

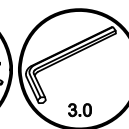


3.0

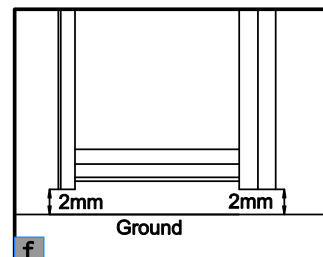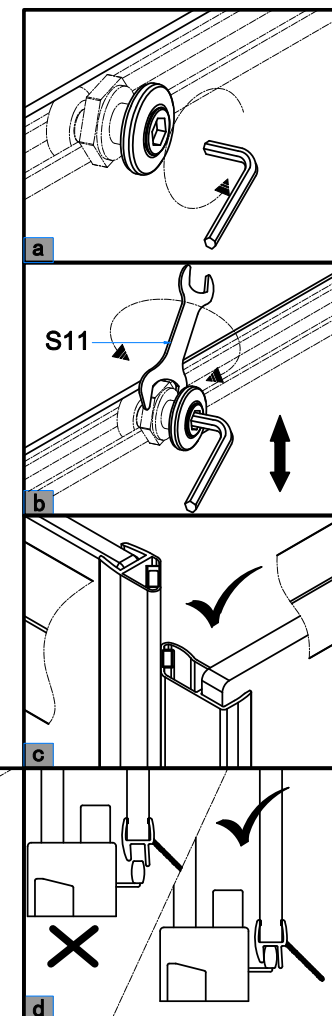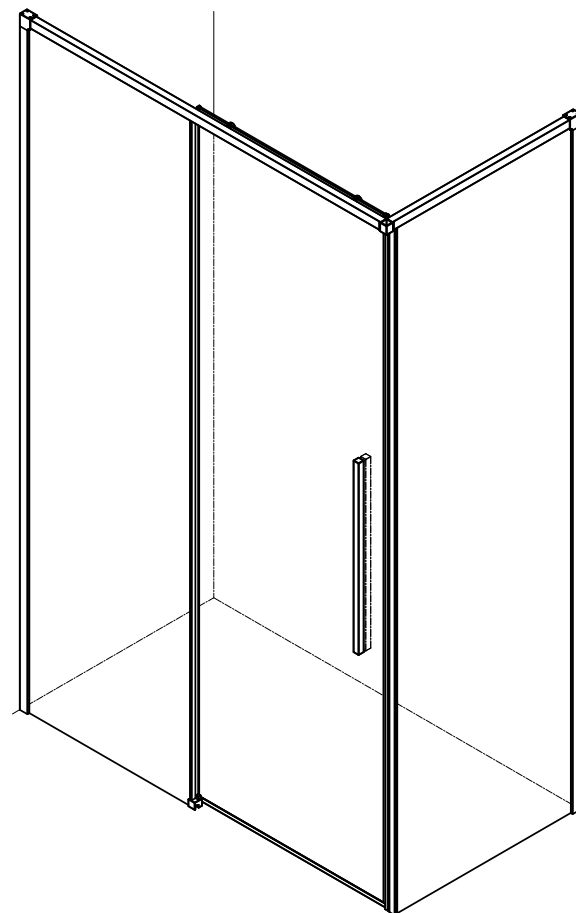









Ground

10

Parts list
(Include):

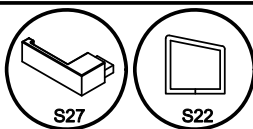


Tools required
for product
installation:

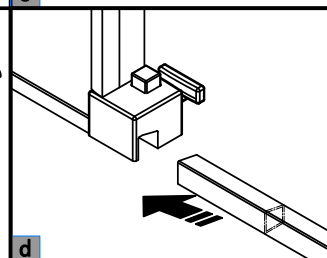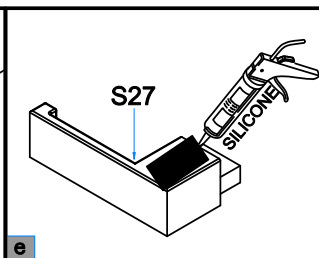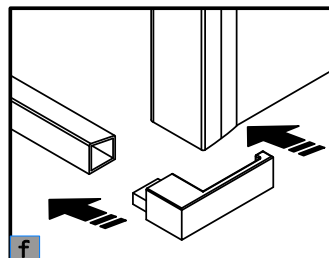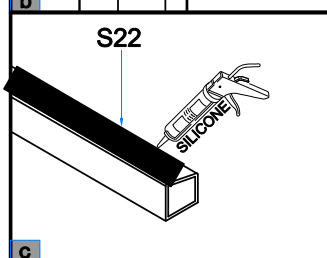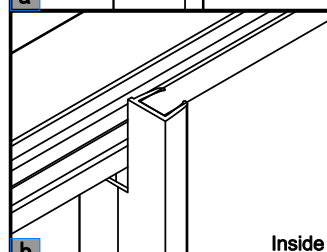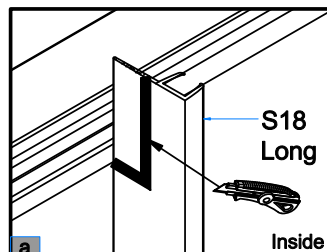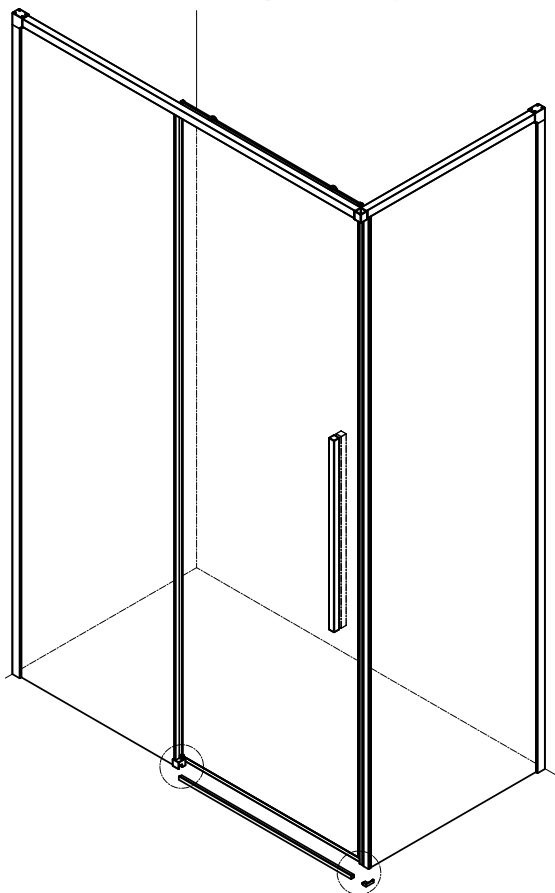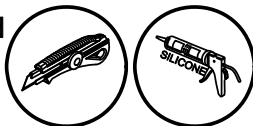


11


Parts list
(Include):

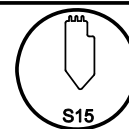






Tools required
for product
installation:

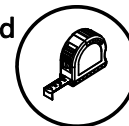

Note: Open the door until the handle is 40mm away from the fixed door vertical seal, install the stopper to the rail profile


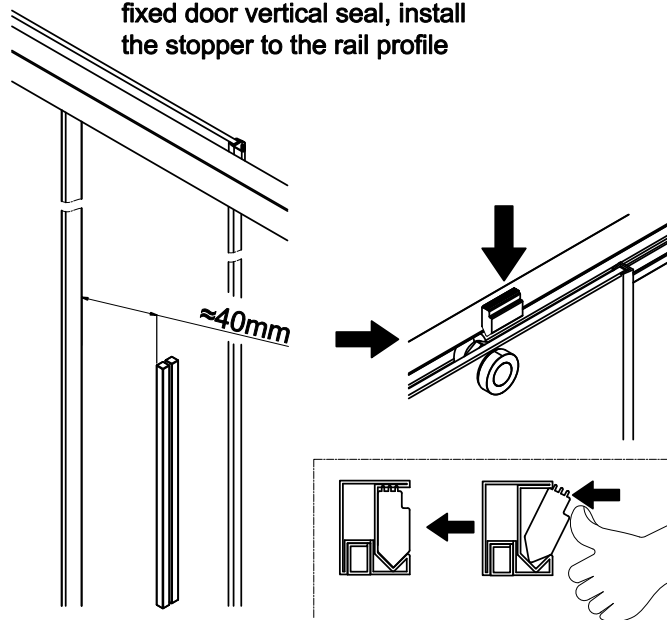


Note: Install the stopper to the rail profile when the door can be closed vertically.

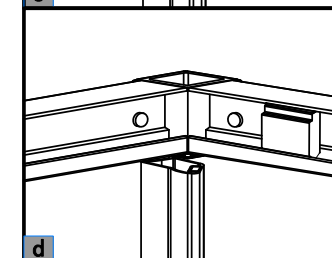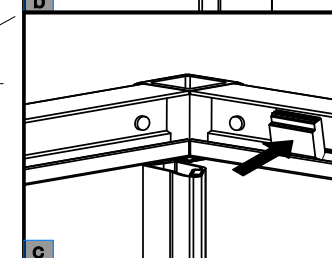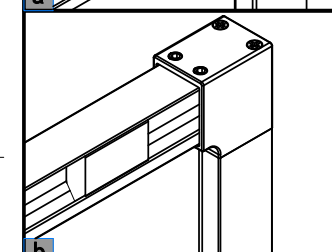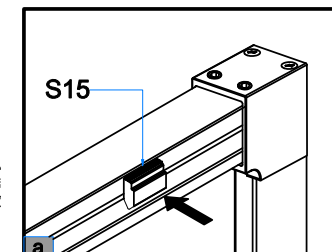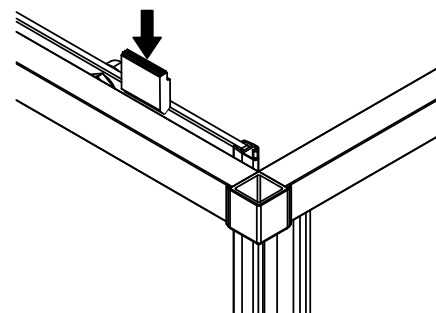

12

Tools required
for product
installation:

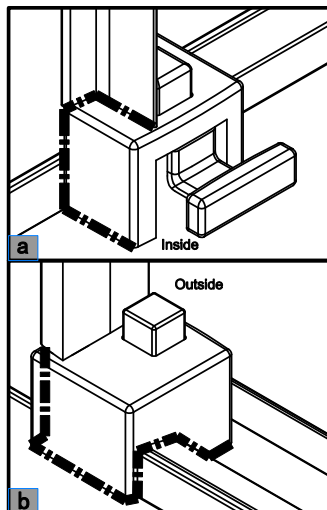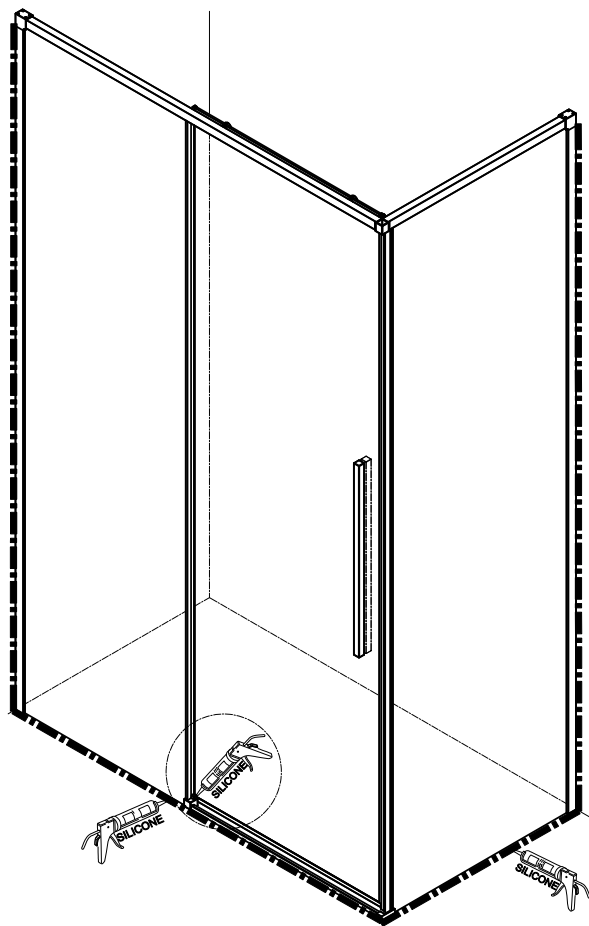

13

Notes for cleaning:

1. Push the button on the bottom guide, and lift up the glass and take out from the bottom guide.
2. After cleaning, push the bottom guide button, lift up the glass and put the glass back on the bottom guide.

