


Maintenance

- Please clean the shower frequently or regularly in order to keep the surface of the shower bright and clean.
- Frequently wash with clean water, dry the shower with a soft cotton cloth.
- Do not use detergents or nylon brushes containing coarse particles such as scouring powder or polishing powder Sweep to avoid abrasion of the product.
- Since acid detergent can corrode the coating, it should not be used. If acid washing is made, the tiles and utensils should be fully washed immediately to avoid them flows to the surface of the shower and corrodes the shower.
- When using, do not pull the shower hose forcefully to prevent the hose from cracking.




- If you need to do a lot of cleaning work, please follow the following procedures
- Use clean water and rags to remove dirt and scale films on the surface as much as possible.
- Use any of the following cleaning detergents to remove dirt and scale films:Mild liquid cleaner.Colorless glass cleaner, non-abrasive and completely dissolved powdery cleaner detergents (and mix as
- instructed) Polishing fluid without abrasionused.
 After cleaning, please use clean water to remove all the detergent and dry it with a soft cotton cloth.

Installation Manual for Four-function Digital Display Shower Set

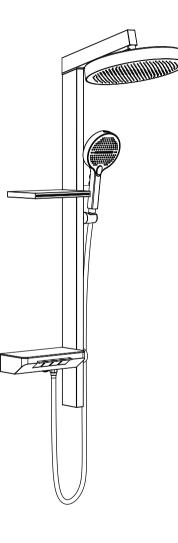

Please read this manual carefully before installation use and keep it properly

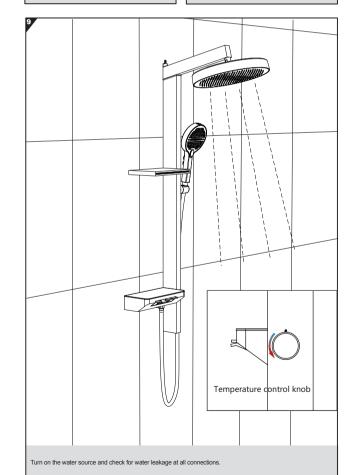

Installation Precautions

 After opening the product package, please check the accessories listed in the "Standard Accessories List"Whether the spare parts are complete, if there is any defect, please contact the local dealer immediately.

2. The main part of the shower has been tested and adjusted by the factory. Please do not disassemble it by yourself to avoid affecting the affect performance.

3. The ground thickness required to install the embedded box is more than 50mm; the aperture size is at least 230mm.

If it is not enough, the ground needs to be raised to the required size.


4.This product can be rotated 360° and has the function of universal water outlet, so when installing the hot and cold inlet When using water pipes, there is no need to consider the direction of

water inlet and outlet. 5.After the pre-embedded box is installed and tested for water, the dust and gravel in the water supply pipe must be completely washed and flushed out before filling the cement sand.

6.After installation, please turn on the water source, and then check whether the connection of the device is tight, to ensure that there is no leak.


7. Applicable pressure: 0.05Mpa~0.75Mpa; Applicable water temperature: 4 $C \sim 80 C$. permanent applicable water pressure of the warm shower: 0.1Mpa~0.5Mpa, and the pressure difference between cold and hot water cannot exceed 0.2Mpa; The hot water temperature of the thermostatic shower should reach 55~80 C. 8.The hose must not be excessively bent. Ensure that the hose does not deform after installation.

Drawing

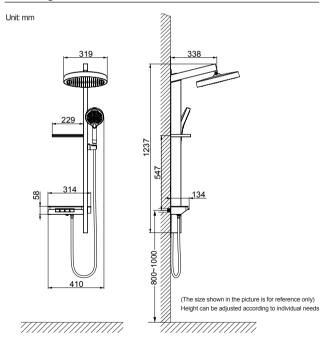

Our company has always pursued a policy of continuously improving and improving the design and performance of its products; We reserve the right to make changes to our products without prior notice

Accessories List

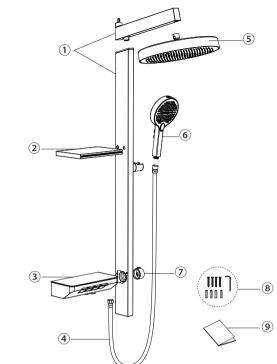


No.	Name	Quantity	
1	Shower rod set	1	
2	Waterfall shoulder spray	1	
3	Main body assembly	1	
4	Shower hose	1	
5	Top shower	1	
6	Handheld shower	1	
7	Rotary switch	1	
8	Fittings package	1	
9	Installation Manual	1	


Please check if the material is consistent with the description or not, Whether the quantity meets the listed.

Prepare the following tools before installation

(<i>IIIIII</i>)		3 •		0	6	Ļ
Drills	V220 Hammer drill	Adjustable wrench	Phillips screwdriver	5M tape measure	PTFE tape	Allen wrench

Installation steps

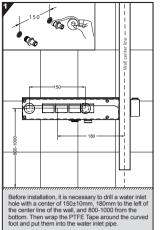


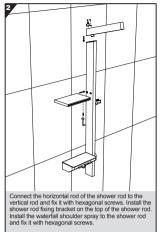



Hole stickers

Install the main body on the curved foot of the wall, and use a level to check whether the main body assembly and waterfail shoulder spray are 90' perpendicular to the shower rod assembly. (The water inlet interface has a built-in filter, please feel free to use it) Use a pen to mark the outline position of the waterfall shoulder spray and the hole position of the shower rod holder on the wall. Remove the components in turn, and paste the hole stickers according to the outline of the waterfall shoulder spray on the wall.

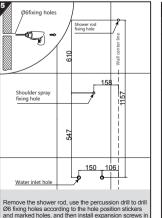

the holes

drill Install the waterfail shoulder spray fixing piece into the hole on the wall, use a hex screwdriver to screw in the bottom of the waterfail shoulder spray to lock the position, and then install the main body to the wall again.



Flush pipe

Checking the channel